


ASSEMBLY INSTRUCTIONS
BATLLÓ DOOR HANDLE



- 1-**
INSERT THE METAL STICK THROUGH THE
DOOR AND PRESS IN THE PLATE.

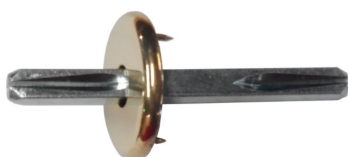


- 2-**
PLACE THE DOOR HANDLE.



- 3-**
TIGHTEN THE SCREW.



- 4-**
REPEAT SAME STEPS ON THE
OTHER SIDE OF THE DOOR.

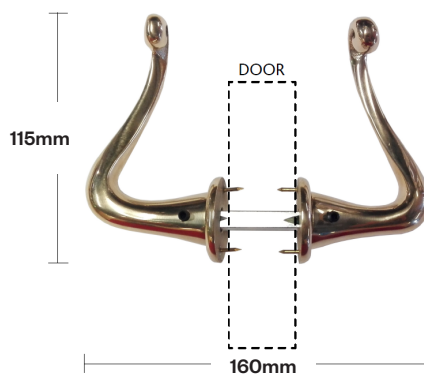

MOUNTING HARDWARE IS INCLUDED FOR
DOORS OF 3 OR 4 INCHES.

WASHERS ARE NOT INCLUDED

