


ASSEMBLY INSTRUCTIONS
CALVET DOOR HANDLE



1-

DRILL TWO Ø7MM HOLES IN THE DOOR BY FITTING THESE MEASURES.

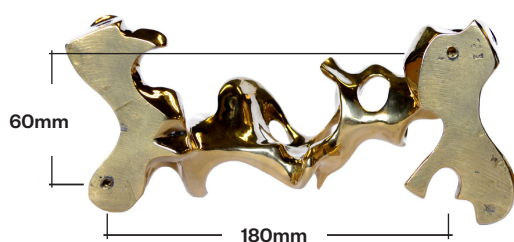

2-

FOR USES IN DOORS FROM 20MM TO 52MM OF THICKNESS. CUT THE SET SCREWS TO FIT THIS THICKNESS. PLACE THE WASHES AND TIGHTEN THE NUTS.



MOUNTING HARDWARE INCLUDES SCREWS OF M6

