



## ASSEMBLY INSTRUCTIONS CALVET DOOR HANDLE

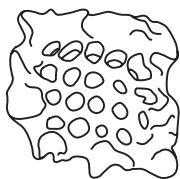

- 1-**  
DRILL FOUR Ø5MM HOLES IN THE DOOR  
BY FITTING THESE MEASURES.

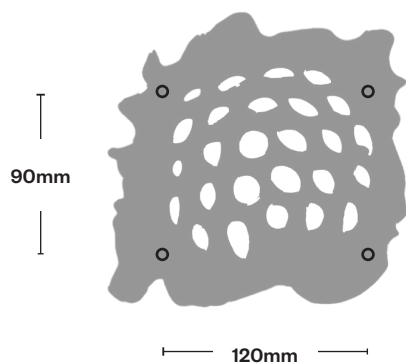

- 2-**  
FOR USES IN DOORS FROM 20MM TO 52MM  
OF THICKNESS. CUT THE SET SCREWS TO FIT  
THIS THICKNESS.  
PLACE THE WASHES AND TIGHTEN THE NUTS.



MOUNTING HARDWARE INCLUDES SCREWS OF M4

