




ASSEMBLY INSTRUCTIONS
KNOBS

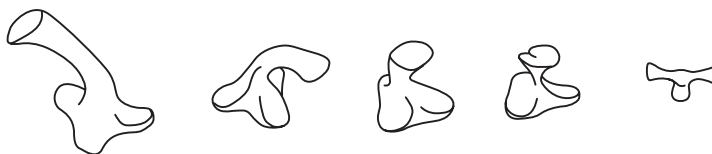

- 1-**
INSERT THE ROD THROUGH THE DOOR AND
PRESS IN THE DOOR HANDLE.

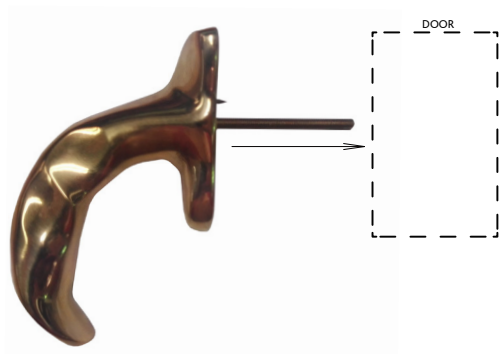

- 2-**
TIGHTEN THE BLIND NUT.

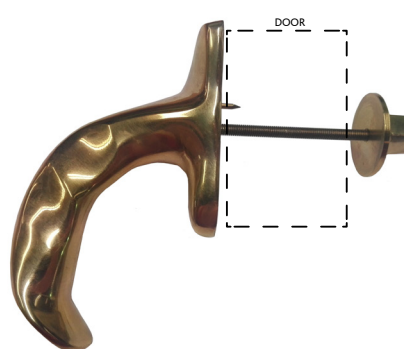

MOUNTING HARDWARE IS INCLUDED FOR
DOORS OF 3 OR 4 INCHES.

WASHERS ARE NOT INCLUDED

